

HS2 Firmware Load Process With A USB Flash Drive

1. Load an empty flash drive with the appropriate file for your unit. (HS2BK_OS.hex and ACMBK_OS.hex)
2. Turn PHU (Product Holding Unit) off.
3. Unplug the network cable from the PHU.
4. Place USB drive in unit USB slot.
5. Turn PHU on.
6. When the timer bar displays switch from pin-wheel displays, the load is complete. Alternatively, you may hear 2 sets of 4 chirps. Remove the USB drive.

Check Firmware

Please note that firmware version should reflect:

HS2: 2.3.0 (M 2, m 3, b 0)

1. Press and hold the paired arrows for a display segment for 5 seconds to enter Menu Mode.



2. With each subsequent button (Arrow) press, the LED will display:
 - a. NAME
 - b. ACTUAL TEMP
 - c. SET TEMP
 - d. TIME
 - e. LID
 - f. COOK MORE TIME
 - g. FIRM (FIRMWARE VERSION)
 - h. NETWORK MODE (DHCP or STATIC)
 - i. IP ADDRESS
 - j. SUBNET MASK
 - k. GATEWAY
 - l. UNIT MAC ADDRESS
3. Menu Mode will exit automatically once no buttons are pressed for 10 seconds.